


# ASSEMBLY INSTRUCTIONS FOR CORKWALL DECORATIVE PANELS


## Required tools:

- spirit level
- pencil
- montage glue
- snap-off blade knife

1. Prepare the wall for panel installation by priming its surface
2. Measure the wall on which the panels will be mounted and plan their arrangement
3. Using a spirit level, mark a vertical line in the center of the wall, which should be the starting point for laying the panels

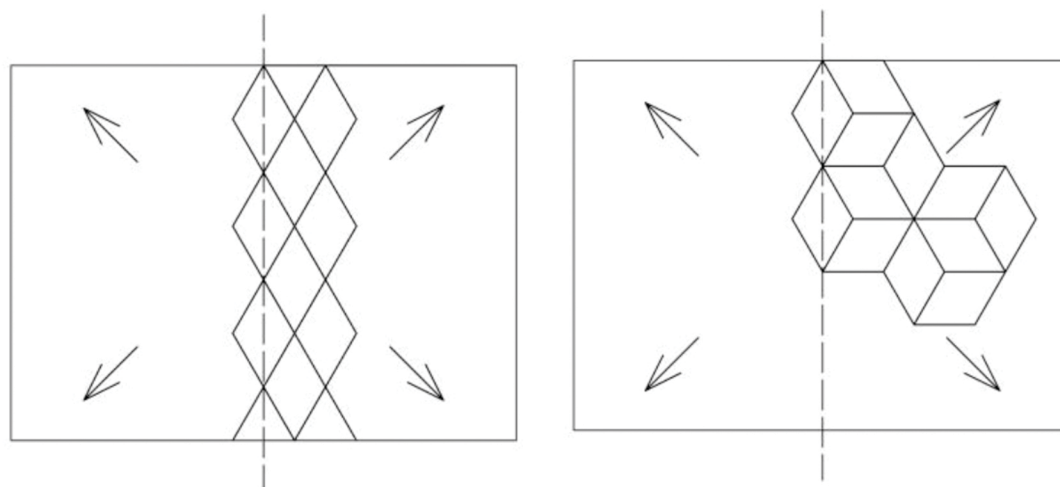

When starting installation elsewhere, take into account the possibility of no right angle between the sides of the wall. In this case, gap between panels may occur, which will increase as you move away from the problematic area

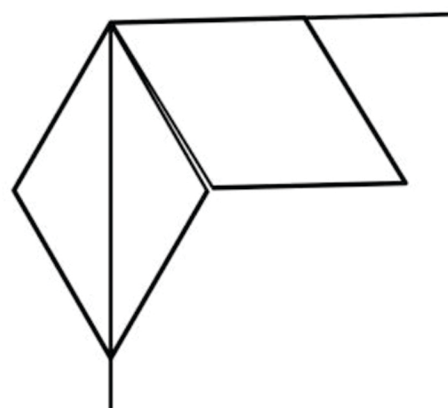

4. Install the panels using mounting glue, applied in spots on the back of the panel

## **IMPORTANT:**

- the panels are made of cork granules. It is a natural product that works. A tolerance of +/- 1 mm should be assumed
- before assembly, check that the panel is evenly aligned with the previous one. If not, one should turn it or choose another one that fits.
- monitor the vertical and horizontal lines of the panels on an ongoing basis using a spirit level
- if necessary, cut the Corkwall decorative panels with a snap-off blade knife
- the mounting glue should be strong and fast-setting

**Regardless, in order to avoid the panels from sliding under the weight of others, it is worth using nails (spikes) until the glue is completely set.**

- the panels should be mounted on a primed, unpainted wall
- do not install the panels at temperatures below 15°C.  
Cork panels should be kept at the same temperature as the prevailing conditions in the room, both before and during the installation process.
- Corkwall panels require acclimatization for at least 48 hours prior to installation so that the panels can reach a similar level of humidity as the environment in which they will be installed. If the cork does not acclimatize before installation, a gap or expansion may occur.



**CORKBEE**